

MUSICAL FIDELITY

Instructions for use

M Series Universal Remote Control

Safety Information

The M Series Universal Remote Control is designed and built to provide trouble-free performance, but as with all electronic devices it is necessary to observe a few precautions:

- Avoid letting liquids enter the device. Never spill any liquid on the device. The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions.
- Dust regularly with a soft cloth or soft brush but be careful when using cleaning or polishing agents - they may harm the surface finish.

Before first use – inserting battery

To insert the battery, unscrew the whole bottom plate of the device. A fitting torx key is included in the packaging. Fit the battery. Make sure the battery is the right way round! Reassemble the bottom of the remote.

Service

Should you encounter a problem, which you are not able to alleviate or identify despite the above information, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

Warranty

The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons, release the manufacturer from any liability over and above the lawful rights of the customer.

Supported Musical Fidelity devices

M2 Series	M2si, M2xi, M2scd
M3 Series	M3i, M3si, M3xi, M3cd, M3scd, M3x DAC
M5 Series	M5si, M5xi
M6 Series	M6i, M6si, M6si500, M6xi, M6cd, M6scd, M6 DAC, M6s DAC, M6sR DAC, M6x DAC, M6 PRE, M6s PRE
M8 Series	M8xi, M8 PRE, M8s PRE, M8xcd, M8x DAC

Weight

Unit only, unboxed / in packaging 172 g / 220 g

Dimensions

Width x Height x Depth 50 x 200 x 10 mm

Battery 1x CR2450

Musical Fidelity reserves the right to make improvements which may result in specification or feature changes without notice.



Copyright, trademarks

Musical Fidelity is a division of Audio Tuning Vertriebs GmbH.

This guide was produced by: Musical Fidelity
Copyright © 2026. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.

REMOTE CONTROL HANDSET

The universal remote control shown below enables functions from this and related units to be operated from a convenient distance.

As the handset uses an invisible infra-red light beam, the front edge must be pointed directly towards the receiver window at the front of the player, without visual obstruction between them.

If the range of the remote control greatly decreases, replace the battery with a new one. – 1x CR2450 is required.

To change the battery, unscrew the whole bottom plate of the device. Replace the battery. Make sure the battery is the right way round! Reassemble the bottom of the remote. A fitting torx key is included in the packaging. The battery needs to be inserted before first use.

Please dispose of used batteries in accordance to local regulations.

CD player section (Grey buttons)

Amp – M2, M3/5/6, M8

Selects the amplifier (integrated or pre-amplifier) series you wish to control

CD / DAC – select whether you want to control CD players or DACs; this works independent of the M series your CD player or DAC is in

CD player controls

Note: please check your CD players manual for exact play/pause/track selection/rewind and fast forward behaviour

▶▶ – fast forward

|◀◀ – previous track, rewind

||▶ – pause/play button


▶▶| – next track, fast forward

STOP – Stop playing

◀◀ – rewind

▶ – pause/play button

Input select buttons

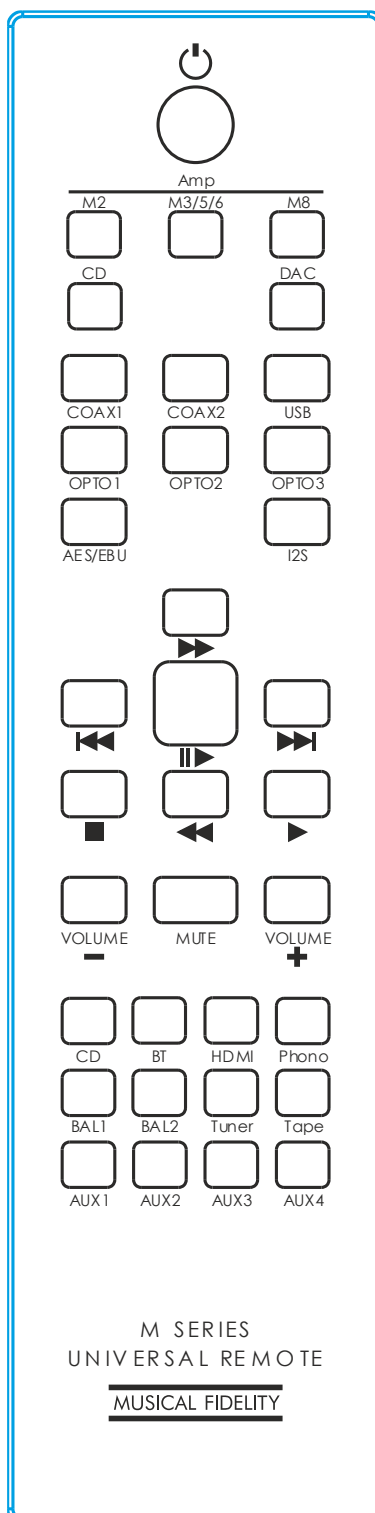

ON/OFF – turns the selected Amp Series, CD player or DAC on/off

Note: not all amplifiers support on/off via remote control. Please check your amplifier's manual.

Input select buttons

Note: OPT03 requires Firmware Update on the M8x DAC in order for this input to be selectable via the M Series Universal Remote.

Please contact Musical Fidelity support for additional information.

MUTE mutes/unmutes compatible devices

VOLUME +/- – increases/decreases volume

Note: please check your amplifier, DAC or CD player manual to see if mute and volume control is supported