

X-P100

REMOTE CONTROL CLASS A PREAMPLIFIER

INSTRUCTIONS FOR USE

Thank you for purchasing the Musical Fidelity X-P100 Remote Control Class A Pre-Amplifier. Used properly and carefully, it should give you many years of outstanding musical reproduction.

This X-P100 is closely based on our highly regarded (and now unavailable) Nu-Vista model but uses a specially selected J-FET in place of the Nuvistor triode.

The X-P100 has been designed to offer almost indistinguishable sonic characteristics to the Nu-Vista.

Aesthetically and electronically the X-P100 matches perfectly with the X-AS100 power amplifier, X-RAY 24 bit CD player and X-PLORA tuner. Together, they form one of the finest hi-fi systems available.

Dust regularly with a soft duster or soft brush but be careful when using cleaning or polishing agents - they may harm the surface finish.

If you have any questions about anything in your audio system, please consult your dealer who is there to help and advise you.

IMPORTANT!

This unit is supplied in the UK with a mains lead fitted with a moulded 13 amp plug. If, for any reason, you need to cut off this plug, please observe the following safety precautions. Please dispose of the cut-off plug safely. It ***must not*** be plugged into a mains power supply.

The wires in the mains lead supplied with this appliance are coloured in accordance with the following code:

Green and yellow.....Earth

Blue.....Neutral

Brown.....Live

WARNING - This appliance must be earthed

As the colours of the wires of the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or coloured green or green-and-yellow, or by the earth symbol .
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.
- The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
- If connecting to a BS1363 plug, a 10 amp fuse must be used.

WARNING - Radio Frequency Interference (RFI)


This hi-fi product has been tested to ensure that its operation will not be adversely affected by normal background levels of RFI. It is possible that if this product is subjected to abnormally high levels of RFI the unit may be susceptible and not perform as expected. In the unlikely event of this happening on a regular basis, please contact Musical Fidelity's service department.

The unit has also been tested to ensure that it does not radiate excessive levels of RFI that could affect other pieces of electronic or electrical equipment.

The electronics in modern hi-fi equipment is complex and hence may be damaged by lightning. It is possible that during electrical storms the operation of some equipment may be adversely affected. For complete protection of your hi-fi system during such storms, mains plugs and aerial leads should be disconnected.

Always ensure that when disconnecting and reconnecting your hi-fi equipment the mains supply is switched off.


CONNECTIONS AND FACILITIES

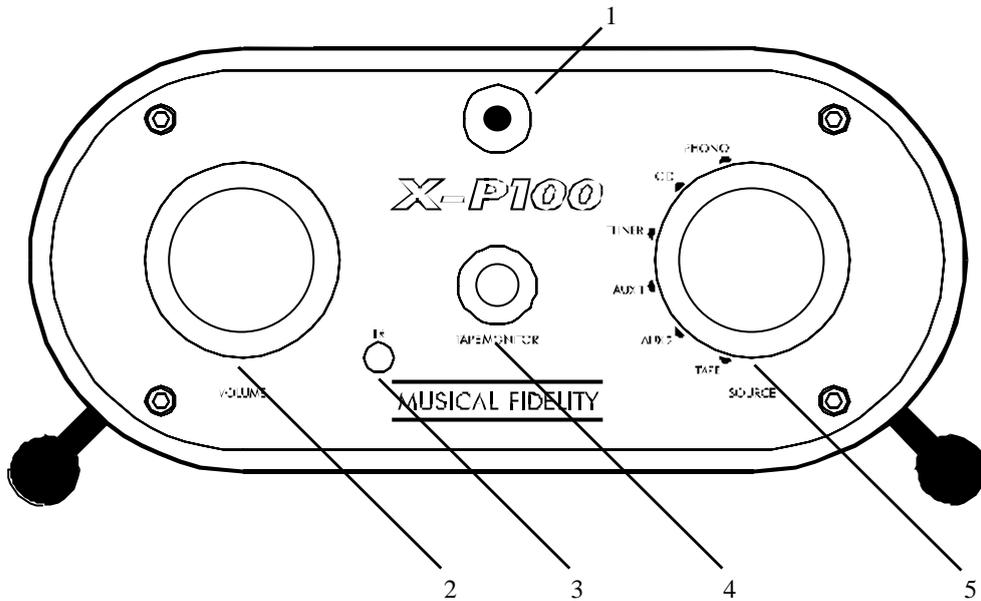

FRONT VIEW

BACK VIEW

- | | | | |
|---|----------------------------------|----|------------------------------|
| 1 | Main unit power on indicator LED | 6 | Input from external PSU unit |
| 2 | Volume control | 7 | Tape record output |
| 3 | Infra Red remote receiver lens | 8 | Tape input |
| 4 | Tape monitor button | 9 | Aux 2 input |
| 5 | Source selector switch | 10 | Aux 1 input |
| | | 11 | Tuner input |
| | | 12 | CD input |
| | | 13 | Preamp Output |
| | | 14 | Phono (MM) input |
| | | 15 | Phono chassis earth |

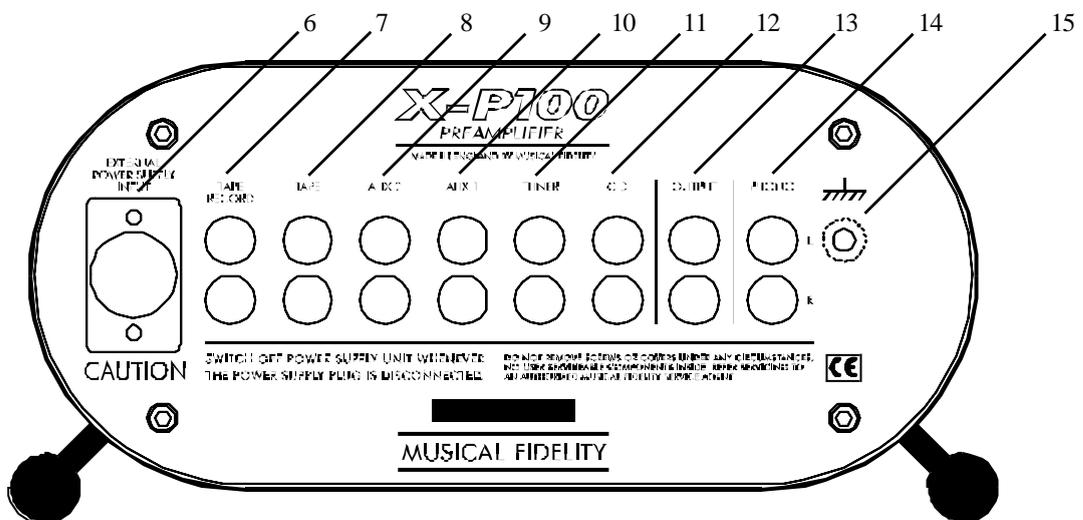

INSTALLATION PRECAUTIONS

Your new X-P100 is designed and built to provide trouble-free performance but as with all electronic devices it is necessary to observe a few precautions. Please ensure that you have complied with them before you connect any AC power to your amplifier. Retain this guide for future reference.

- Heed all warnings on the back of the unit.**
- Do not use near water.**
- Place your X-P100 where there is adequate ventilation.**
- Do not place the units near direct heat sources such as radiators or other equipment that produces heat.**
- Only connect the unit to a power supply of the type marked on the back of the unit.**
- Do not remove any covers or try to gain access to the inside. The warranty will be invalid if the unit has been tampered with. There are no user adjustments within. Refer all service work to an authorised Musical Fidelity agent.**
- Position the power supply lead and signal interconnect leads where they are not likely to be walked on or trapped by items placed on them.**

BEFORE YOU SWITCH ON

You should make all connections to the X-P100 before switching on.

Follow this routine before you listen for the first time, and each time you change any connections.

- 1 Check all the inputs and outputs to the X-P100.
- 2 Then check again.
- 3 Turn the volume control to nil.
- 4 Now you can switch on the power and carefully advance the volume to the level you want and enjoy the music.

INTRODUCTION

Congratulations on your purchase of an X-P100 remote control Class A preamplifier.

The X-P100 is a new model based on our innovative and now very highly regarded Nu-Vista valve preamp but using Field Effect Transistors in place of the Nuvistor valves used in that model.

These transistors were carefully selected from the great many alternatives we tested because of their close similarity in both measured performance and sonic fingerprint to the 6CW4 Nuvistor. We feel that the X-P100 offers a very similar level of sonic fidelity to the Nu-Vista but at the reduced cost afforded by the choice of FET devices.

The X-P100 preamp also features full remote control and a high quality discrete MM phono stage.

EXTERNAL POWER SUPPLY AND SETTING UP

The X-P100 is supplied with an external power supply which is connected to the main unit via an umbilical lead terminated in an XLR/Cannon type plug. This lead should be connected to the socket on the back of the X-P100 main unit.

Caution - This power supply is for use only with the Musical Fidelity X-P100. Do not plug the power supply into any other unit.

Important - follow the following procedure when setting up the X-P100 for the first time or if you should need to re-site your X-P100.

1. Make sure that the PSU unit is switched off (front panel button in the 'out' position) and that the PSU's mains lead is disconnected.

2. Plug the umbilical lead from the X-P100 PSU into the back of the X-P100 main unit

3. Connect the supplied mains lead from the IEC type socket on the back of the PSU unit and to a suitable mains outlet.

4. Switch on your X-P100 using the On/Off button which is situated on the X-P100 PSU front panel. After a delay of approximately 10-15 seconds the unit will un-mute and is ready for use.

CONNECTIONS

All connections should be made with the power OFF.

The X-P100 has 5 line level inputs - CD, Tuner, Aux1, Aux2 and Tape, plus an MM phono input. All line inputs are electrically identical and are suitable for use with any source component with an output voltage in the hundreds of millivolts (mV). This includes CD players, tuners, tape machines and the audio outputs of video recorders, televisions, DVD and LaserDisc players etc.

The high quality phono input caters for turntables fitted with a Moving Magnet type cartridge or other cartridges with an output voltage in the range 1 to 5mV.

TAPE RECORDING

The X-P100 has a single tape circuit with facilities for off-tape monitoring with 3-head cassette decks.

Connection of your tape machine to the X-P100 should be as follows. The tape machine's Tape/Line outputs go to the X-P100's 'Tape' input sockets. The tape machine's Tape/Line inputs go to the X-P100's 'Tape Record' output.

To record simply select the required source with the source selector knob on the front panel. The selected source will now be sent to the 'Tape Record' output for recording by the attached tape machine.

You will also be able to hear the selected source through the loudspeakers.

Note - you can adjust the listening level with the volume control without affecting the recording level.

OFF TAPE MONITORING

In conjunction with a 3-head cassette deck, off-tape monitoring allows the user to compare the recorded to original sound whilst a recording is made.

To do this first select the required source in the normal way and start recording. The Tape Monitor button on the front panel can now be used to switch between the source signal and the recorded signal allowing direct comparison.

Note that tape (the recorded signal) is selected when this button is in. On some 3-head cassette decks there is an additional 'tape/source' switch which will need to be in the 'tape' position for the above to work - if you are in any doubt consult your tape machine's manual.

REMOTE CONTROL

The X-P100 features Infra Red remote control of volume, input selection and mute functions via the supplied remote control handset. The Infra Red receiver is the small red lens marked I.R. situated on the front panel, it is a good idea to place your X-P100 such that there is an unobstructed line-of-sight to this lens from around your listening room.

Pressing the volume up or down buttons on the remote handset will advance the motorised volume control in the desired direction.

If either button is held down for more than approximately 2-3 seconds the motor drive will go into high speed mode and the volume control will advance more rapidly.

Input selection is achieved by a motorised selector switch which will automatically turn to the input selected with the remote handset.

Please note that if the selector switch is not firmly positioned on a valid input when a new selector position is selected on the remote control, the X-P100 will turn the selector switch to its first position, (Tape), and reset the selector control mechanism before then moving on to the correct input.

The output is muted whilst the selector switch rotates by remote control.

The mute button on the remote handset mutes the output from the preamp, pressing this button again or selecting a different input selection will un-mute the unit.

Basic troubleshooting of an amplifier is similar to troubleshooting of any other electrical or electronic equipment. Always check the most obvious possible causes first. To give you a few ideas of what to look for, check the following:

<i>Problem</i>	<i>Probable Cause</i>	<i>Remedy</i>
No power when POWER is pressed	Mains plug not inserted correctly	<i>Plug in securely</i>
	PSU unit not connected to main unit	<i>Plug PSU umbilical lead into back of main X-P100 unit</i>
No sound	Volume control is set to minimum	<i>Turn up the volume</i>
	Mute is selected	<i>Press mute button on remote control</i>
	Preamplifier not connected to Power amplifier	<i>Check phono cable connection between units</i>
	Unit has not yet come out of power-up mute	<i>Wait 10-15 seconds on power-up for unit to un-mute</i>
	Tape Monitor button is depressed	<i>Press Tape monitor button</i>
	Speakers are not connected, or are connected incorrectly	<i>Check speaker cables</i>
Sound is not precise, lacking in bass and stereo image	Speakers are connected out of phase	<i>Make sure that both speakers are connected correctly</i>

If none of these actions effect a cure, please contact your dealer, or an authorised Musical Fidelity service agent. Remember, never open the case of the X-P100 yourself, as this will invalidate the guarantee.

X-P100

REMOTE CONTROL CLASS A PREAMPLIFIER

Inputs	5 Line, MM phono
THD	< 0.007% 20Hz - 20kHz unweighted < 0.004% 20Hz - 20kHz 'A' weighted
Frequency response	20Hz - 20kHz \pm 0.2dB
S/N ratio	MM phono > 72dB unweighted MM phono > 78dB 'A' weighted Line > 81dB unweighted Line > 90dB 'A' weighted
Dimensions	230 x 110 x 315mm (W x H x D) Width and height include feet
Power consumption	20 watts (maximum)
Standard accessories	Remote control handset X-P100 power supply unit IEC type mains lead 2 x batteries (AA, SUM-3, CR6)



Musical Fidelity reserves the right to make improvements which may result in specification or feature changes without notice.